

## Stoltzen PS41H



## HDMI 2.0 4x1 Presentation Switcher with Audio Extraction

All Rights Reserved

Version: PS41H\_2019V1.1

## **Preface**

Read this user manual carefully before using the product. Pictures shown in this manual are for reference only. Different models and specifications are subject to real product.

This manual is only for operation instruction, please contact the local distributor for maintenance assistance. The functions described in this version were updated till May, 2019. In the constant effort to improve the product, we reserve the right to make functions or parameters changes without notice or obligation. Please refer to the dealers for the latest details.

## **FCC Statement**

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



## **SAFETY PRECAUTIONS**

To ensure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment.
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

## **Table of Contents**

1. Product Introduction.....	1
1.1 Features .....	1
1.2 Package List.....	2
2. Specification .....	3
3. Panel Description.....	5
3.1 Front Panel.....	5
3.2 Rear Panel.....	6
4. System Connection.....	7
4.1 Usage Precaution .....	7
4.2 System Diagram .....	7
5. Button Control.....	8
5.1 Manual Switching .....	8
5.2 Automatic Switching .....	8
5.3 Display Control .....	8
5.4 EDID Setting.....	9
6. IR Remote Control .....	10
7. GUI Control.....	11
7.1 Switching Tab .....	12
7.2 Display Control Tab.....	13
7.3 Audio Tab.....	14
7.4 EDID Tab .....	15
7.5 RS232 Tab.....	16
7.6 Tag Tab.....	17
7.7 Network Tab.....	17
7.8 Access Tab .....	18
7.9 GUI Upgrade .....	19
8. RS232 Control .....	20
8.1 RS232 Control Software.....	20
8.2 RS232 Command .....	22
8.2.1 Device Control.....	22
8.2.2 Source Switching.....	23

## **Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher**

---

8.2.3 EDID Management .....	23
8.2.4 Audio Control .....	24
8.2.5 Display Control .....	24
8.2.6 Third-party Device Control .....	25
9. Firmware Upgrade .....	31
10. Panel Drawing .....	32
11. Troubleshooting & Maintenance .....	33
12. Customer Service .....	34

# 1. Product Introduction

Thanks for choosing the HDMI 2.0 4x1 Presentation Switcher. The switcher allows selection of four different sources (three HDMI inputs and one DisplayPort input), and will simultaneously switch the selected video to HDMI output. It supports video resolution up to 4Kx2K@60Hz 4:4:4 8bit, 1080P, and 3D. In addition, there is the smart built-in EDID setting can be selected by the 4-pin DIP switch on the rear panel.

The switcher supports stereo and multichannel audio on the HDMI inputs. In addition to the audio embedded in the HDMI output stream, the audio is simultaneously de-embedded to an optical digital audio output and a balanced analog audio output.

The switcher features multiple methods of control. When in the AUTO mode, the switcher will automatically switch to the first detected source device. When the active source is removed, the switcher will switch from input 1 to 4. The switcher can be manually controlled by the front panel buttons, IR remote and RS232 command. CEC allows the display device can be controlled by the front panel buttons and RS232 CEC commands.

## 1.1 Features

- Supports HDMI 2.0 and video resolution up to 4K@60Hz 4:4:4 8bit, 1080P, and 3D.
- 18Gbps bandwidth and supports HDR10, HDR10+, Dolby Vision.
- HDCP 2.2 compliant.
- Supports automatic switching.
- CEC control for display volume and ON/FF.
- Controllable via RS232 and IR.
- Optical and balanced analog audio for audio de-embedding.
- Smart EDID management for various application and customized setting.

## **1.2 Package List**

- 1x PS41H HDMI 2.0 4x1 Presentation Switcher
- 2x Mounting Ears with 4 Screws
- 4x Plastic Cushions
- 1x IR Receiver
- 1x IR Remote
- 1x 3-pin Terminal Block
- 1x 5-pin Terminal Block
- 1x RS232 Cable (3-pin terminal block to DB9)
- 1x Power Adapter (12V DC, 1A)
- 1x User Manual

**Note:** *Please contact your distributor immediately if any damage or defect in the components is found.*

## 2. Specification

<b>Video</b>	
Video Input	(1) HDMI/MHL, (2) HDMI, (1) DP
Video Input Connector	(3) Type-A female HDMI, (1) DisplayPort
HDMI Input Resolution	Up to 4Kx2K@60Hz 4:4:4 8bit
MHL Input Resolution	Up to 1080P@60Hz
DP Input Resolution	Up to 4Kx2K@60Hz 4:4:4 8bit
Video Output	(1) HDMI
Video Output Connector	(1) Type-A female HDMI
HDMI Output Resolution	Up to 4Kx2K@60Hz 4:4:4 8bit
HDMI Version	2.0
HDCP Version	2.2
MHL Version	2.2
DP Version	1.2
HDR 10	Supported
CEC	Supported
HPD	Supported
<b>Audio</b>	
Audio Output	(1) OPTICAL, (1) Stereo balanced L/R
Audio Output Connector	(1) Toslink connector, (1) 5-pin terminal block
HDMI Audio Format	LPCM 7.1 audio, Dolby Atmos®, Dolby® TrueHD, Dolby Digital® Plus, DTS: X™, and DTS-HD® Master Audio™ pass-through.
Stereo analog L/R audio Format	PCM
Toslink Digital Audio Format	PCM, Dolby Digital, DTS, DTS-HD
Max Output Level	2.0Vrms ± 0.5dB. 2V = 16dB headroom above -10dBV (316mV) nominal consumer line level signal
THD+N	<0.05% (-80dB), 20Hz ~ 20KHz bandwidth, 1KHz sine at 0dBFS level (or max level)
SNR	>80dB, 20Hz ~ 20KHz bandwidth
Crosstalk Isolation	>70dB, 10KHz sine at 0dBFS level (or max level before clipping)
L-R Level Deviation	< 0.3dB, 1KHz sine at 0dBFS level (or max level before clipping)



## Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher


Frequency Response Deviation	<± 0.5dB 20Hz ~ 20KHz
Output Load Capability	1KΩ and higher (supports 10x paralleled 10KΩ loads)
Stereo Channel Separation	>70dB@1KHz
<b>Control Part</b>	
Control	(1) FW, (1) EDID, (1) IR IN, (1) RS232, (1) TCP/IP
Control Connector	(1) Micro-USB, (1) 4-pin DIP switch, (1) 3.5mm mini jack, (1) 3-pin terminal block, (1) RJ45
<b>General</b>	
HDMI 2.0 Cable Length	4K@60Hz 4:4:4 ≤ 5m, 4K@60Hz 4:2:0 ≤ 10m, 1080P ≤ 15m
Bandwidth	18Gbps
Operation Temperature	-10°C ~ +55°C
Storage Temperature	-25°C ~ +70°C
Relative Humidity	10%-90%
External Power Supply	Input: AC 100~240V, 50/60Hz, Output: 12V DC 1A
Power Consumption	5W (Max)
Dimension (W*H*D)	262mm x 26mm x 84mm
Net Weight	320g




### Main Video Resolution Parameters:

Resolution	Frame Rate (Hz)						Bit Depth 8 bit, 10bit, 12bit	Color Space 4:4:4 4:2:2 4:2:0
	24	25	30	50	59.94	60		
1080P	√	√	√	√	√	√	√	√
1920x1200	-	-	-	√	-	√	√	√
3840x2160	√	√	√	-	-	-	√	√
	-	-	-	√	√	√	Only 8 bit	√
4096x2160	√	√	√	-	-	-	√	√
	-	-	-	√	√	√	Only 8 bit	√


## 3. Panel Description
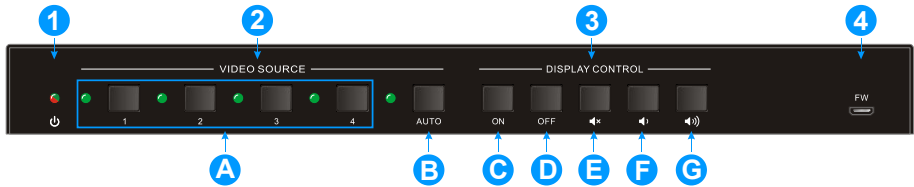
### 3.1 Front Panel



- ① **Power LED:** The LED illuminates red when the device is in standby, or illuminates green when the device is power on.
- ② **VIDEO SOURCE:**
  - Press **1~4** button to select input source respectively, and its corresponding LED illuminates green.
  - Press and hold the **AUTO** button at least three seconds to enable automatic switching mode, and its LED illuminates green.
- ③ **DISPLAY CONTROL:**
  - Press **ON** to turn on the display.
  - Press **OFF** to turn off the display.
  - Press  to mute/unmute display audio.
  - Press  to decrease the audio volume gradually, or press and hold it to decrease the audio volume constantly.
  - Press  to increase the audio volume gradually, or press and hold it to increase the audio volume constantly.
- ④ **FW:** Micro-USB port for firmware upgrade.

### 3.2 Rear Panel

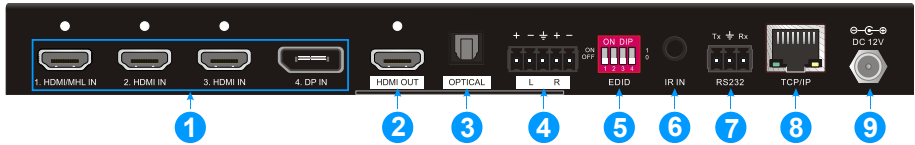

#### ① VIDEO SOURCE:

- Three type-A female HDMI input ports to connect HDMI video source.
- One DisplayPort input port to connect DisplayPort video source.

② **HDMI OUT:** Type-A female HDMI output port to connect video display.

③ **OPTICAL:** Toslink connector for digital audio output.

④ **L/R:** 5-pin terminal block for balanced audio output.

⑤ **EDID:** 4-pin DIP switch for EDID setting.

⑥ **IR IN:** 3.5mm mini jack to connect IR receiver to control the switcher by the included IR remote.

⑦ **RS232:** 3-pin terminal block to connect RS232 control device (PC) or a device to be controlled by RS232 commands.

⑧ **TCP/IP:** RJ45 connector to connect control device (e.g. PC) to control the switcher via GUI.


⑨ **DC 12V:** DC barrel port for power adapter connection.

## 4. System Connection

### 4.1 Usage Precaution

- Make sure all components and accessories included before installation.
- System should be installed in a clean environment with proper temperature and humidity.
- All of the power switches, plugs, sockets, and power cords should be insulated and safe.
- All devices should be connected before power on.

### 4.2 System Diagram

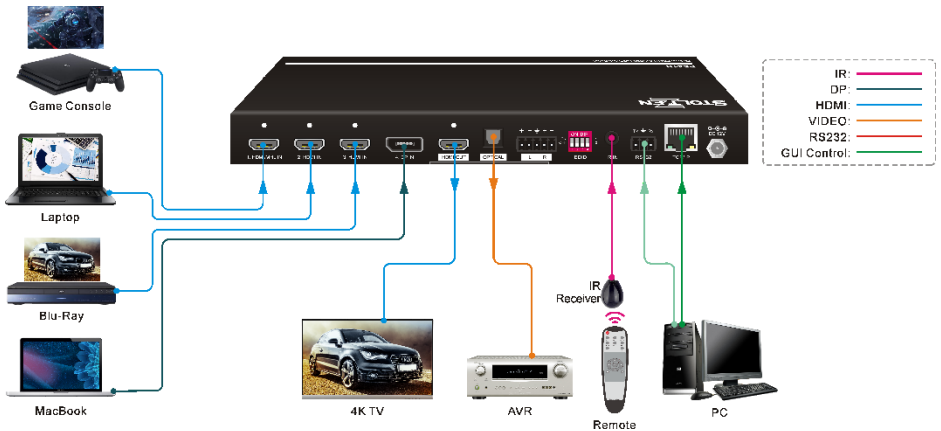

## 5. Button Control

### 5.1 Manual Switching

When the switcher is in the manual switching mode, the Auto Mode LED goes out. If need to change the input source, please directly press the **1**, **2**, **3** or **4** button, and the corresponding LED illuminates green immediately.

### 5.2 Automatic Switching




Press and hold the **AUTO** button at least three seconds to enable automatic switching, and the Auto mode LED will light.

When in the Auto mode, the switcher will switch according to the following rules:

- *The switcher will switch to the first available active input starting at input 1 to 4.*
- *New input: The switcher will automatically select the new input once detecting a new input.*
- *Reboot: If power is restored to the switcher, it will automatically reconnect the input before powered off.*
- *Source removed: When an active source is removed, the switcher will switch to the first available active input starting at 1-HDMI/MHL input.*
- *Press the Video Source button (**1**, **2**, **3** or **4**) can directly change the input source. If the corresponding source device is active, it will be switched as input source; otherwise, the switcher will switch to the first available active input starting at 1-HDMI/MHL input.*
- *Press and hold the **AUTO** button at least three seconds again can exit AUTO mode, but the input source will remain the current setting.*

### 5.3 Display Control

The switcher supports CEC, and the **DISPLAY CONTROL** buttons on the front panel are designed for Display On/Off and volume adjustment.

- **ON**: Display On.
- **OFF**: Display Off.
-  : Mute/unmute display audio.
-  : Volume down display audio.
-  : Volume up display audio.

### 5.4 EDID Setting

The Extended Display Identification Data (EDID) is used for the source device to match its video resolution with the connected display. By default, the source device obtains its EDID from the first connected display. Meanwhile, since the displays with different capabilities are connected to the switcher, the 4-pin DIP switch on the rear panel can be used to set the EDID to a built-in fixed value. Use the following table to determine the setting for the 4-pin DIP switch for specific video resolution and audio capabilities.

The switch represents “0” when in the lower (**OFF**) position, and it represents “1” while putting the switch in the upper (**ON**) position.




Switch Status	Video Resolution	Audio Format
0000 (Default)	EDID pass-through	
0001	1920x1080@60Hz RGB 4:4:4 8bit	Stereo Audio
0010	1920x1080@60Hz RGB 4:4:4 8bit	High Definition Audio
0011	1920x1080@60Hz RGB 4:4:4 12bit	Stereo Audio
0100	1920x1080@60Hz RGB 4:4:4 12bit	High Definition Audio
0101	3840x2160@60Hz RGB 4:2:0 12bit	Stereo Audio
0110	3840x2160@60Hz RGB 4:2:0 12bit	High Definition Audio
0111	3840x2160@60Hz HDR	Stereo Audio
1000	3840x2160@60Hz HDR	High Definition Audio
1001	1280x800@60Hz RGB 4:4:4 8bit	Stereo Audio
1010	1920x1200@60Hz RGB 4:4:4 8bit	Stereo Audio
1011	User-defined 1	
1100	User-defined 2	
1101	User-defined 3	
1110	User-defined 4	
1111	Enable GUI or RS232 EDID management.	

**Note:**

- *Stereo Audio: LPCM 2Ch*
- *High Definition Audio: LPCM 8Ch, AC-3 6Ch, DTS 5.1, Dolby Digital5.1.*

## 6. IR Remote Control

Connect the **IR IN** port to an IR receiver, the switcher can be controlled by the below IR remote.

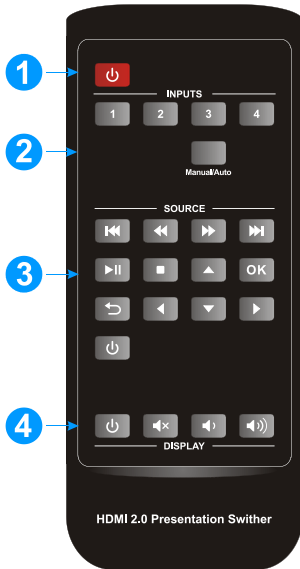

- ① Enter or exit standby mode.
- ② Video input selection buttons (1~4) and AUTO mode button.
- ③ Source device control buttons.

	Page Up		Page Down
	Rewind		Fast Forward
	Pause/Play		Stop
	Exit		Enter
	Up		Down
	Left		Right
	Power On/Off		

- ④ Display device control buttons.

	Power On/Off		Mute/Unmute
	Volume Down		Volume Up


## 7. GUI Control

The switcher can be controlled via TCP/IP, and the default IP setting is:

IP Address: 192.168.0.178

Subnet Mask: 255.255.255.0

Please type **192.168.0.178** in the internet browser, and it will enter the below log-in webpage:

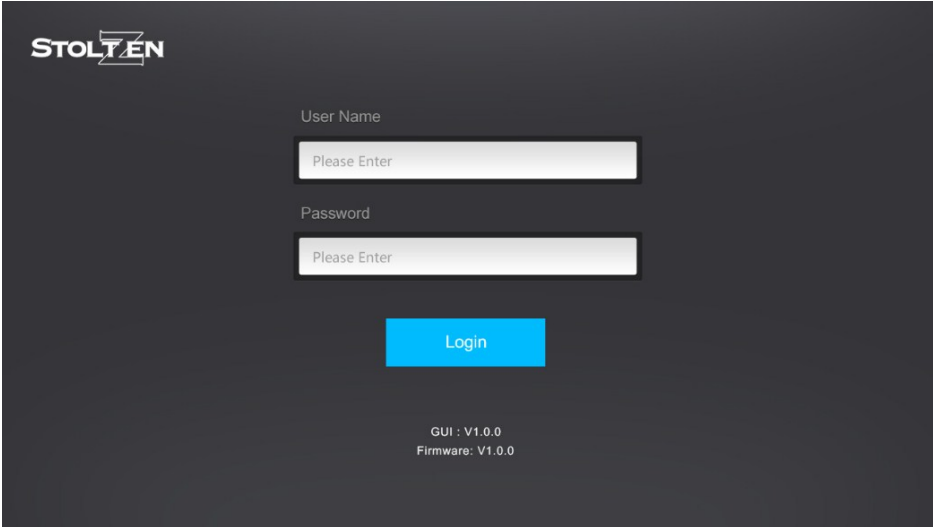


There are two selectable usernames:

User Name	Password	Access Tab
admin	admin	All tabs
user	user	<b>Switching</b> and <b>Display Control</b> tabs

Here we login as “admin” as an example to introduce each GUI tab.




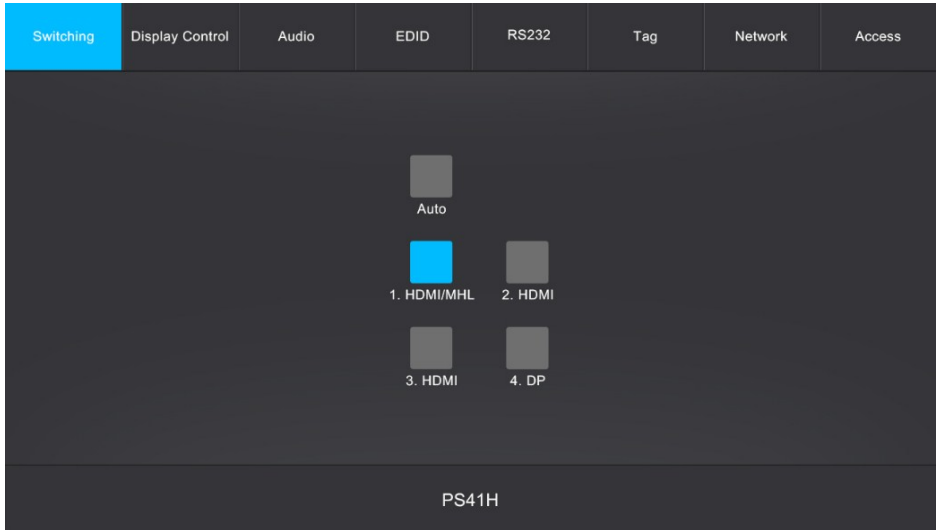


### 7.1 Switching Tab




- Click the **AUTO** button to enable automatic switching mode.
- Click **1~4** button to select input source respectively.
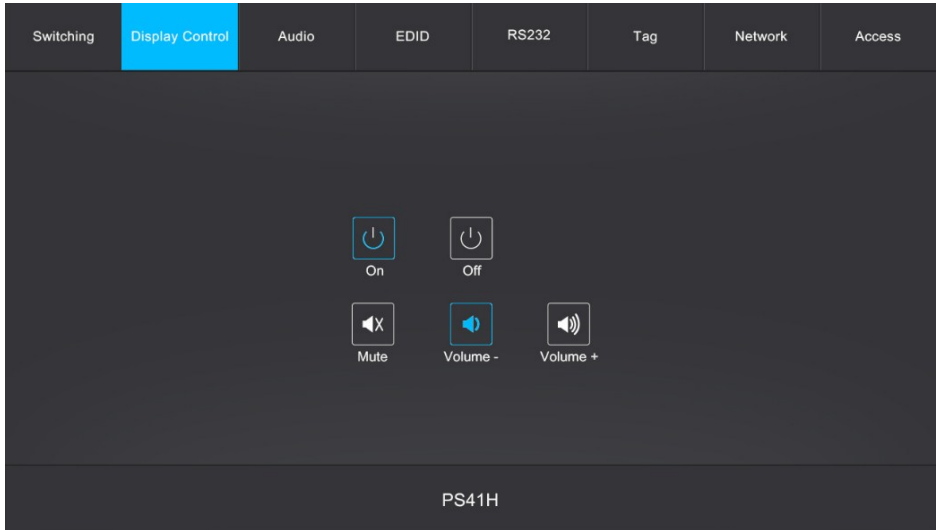
## 7.2 Display Control Tab




- **ON:** Display On.
- **OFF:** Display Off.
-  : Mute/unmute display audio.
-  : Volume down display audio.
-  : Volume up display audio.

### 7.3 Audio Tab

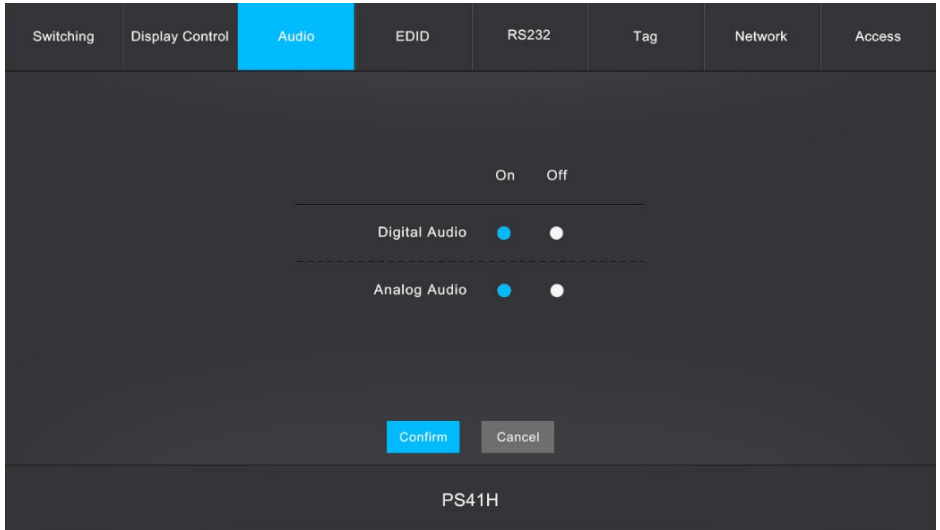

- Turn on or turn off the digital audio output.
- Turn on or turn off the analog audio output.

## 7.4 EDID Tab

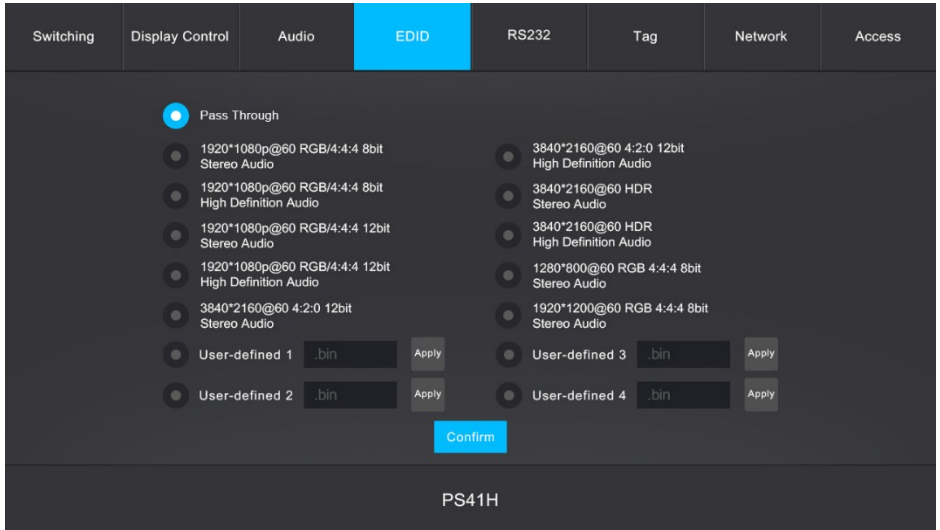


**Note:** Before select EDID in this tab, please ensure the 4-pin DIP switch on the rear panel is on the “1111” position.

- **Built-in EDID:** There are ten built-in EDID values can be selected by this tab.
- **User-defined EDID:** There are four EDID values can be customized by the below steps:

Step 1: Prepare the EDID file (.bin) on the control PC.

Step 2: Select the user-defined.

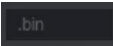Step 3: Click the black box , and then select the EDID file (.bin) according the tooltip.

Step 4: Click **Apply** to upload the user-defined EDID.

### 7.5 RS232 Tab

The screenshot shows the RS232 configuration interface. At the top, there is a navigation bar with tabs: Switching, Display Control, Audio, EDID, RS232 (highlighted in blue), Tag, Network, and Access. Below the tabs, the RS232 configuration area includes:

- Radio buttons for ASCII (selected) and HEX.
- A Baud Rate dropdown menu set to 9600.
- A Command Ending dropdown menu set to NULL.
- A Command text input field containing 'xxxxxx'.
- A Send button.

At the bottom of the interface, the text 'PS41H' is displayed.

- **Baud Rate:** Supports 2400, 4800, 9600, 19200, 38400, 57600 or 115200.
- **Command Ending:** NULL, CR, LF or CR+LF can be chosen.
- **Command:** Type the command in this box to control the third-party device which is connected to the RS232 port of the switcher.

## 7.6 Tag Tab

The screenshot shows the 'Tag' configuration tab selected in the top navigation bar. The main content area contains the following elements:

- Title Bar Label:** A text input field containing 'PS41H'.
- Button Labels:** Four text input fields arranged in a 2x2 grid:
  - 1. HDMI/MHL
  - 2. HDMI
  - 3. HDMI
  - 4. DP
- Confirmation:** Two buttons at the bottom: 'Confirm' (highlighted in blue) and 'Cancel' (greyed out).

The footer of the interface displays 'PS41H'.

- Modify the title bar label and button labels.

## 7.7 Network Tab

The screenshot shows the 'Network' configuration tab selected in the top navigation bar. The main content area contains the following elements:


- MAC Address:** A text input field containing '44-33-4C-C9-35-12'.
- Protocol Selection:** Two radio buttons: 'DHCP' (greyed out) and 'Static IP' (selected, highlighted in blue).
- IP Address:** A text input field containing '192.168.0.178'.
- Subnet Mask:** A text input field containing '255.255.255.0'.
- Gateway:** A text input field containing '192.168.0.1'.
- Confirmation:** A 'Confirm' button (highlighted in blue) at the bottom.

The footer of the interface displays 'PS41H'.

- Set Static IP or Dynamic Host Configuration Protocol (DHCP).

- Modify the static IP Address, Subnet Mask, and Gateway.

### 7.8 Access Tab

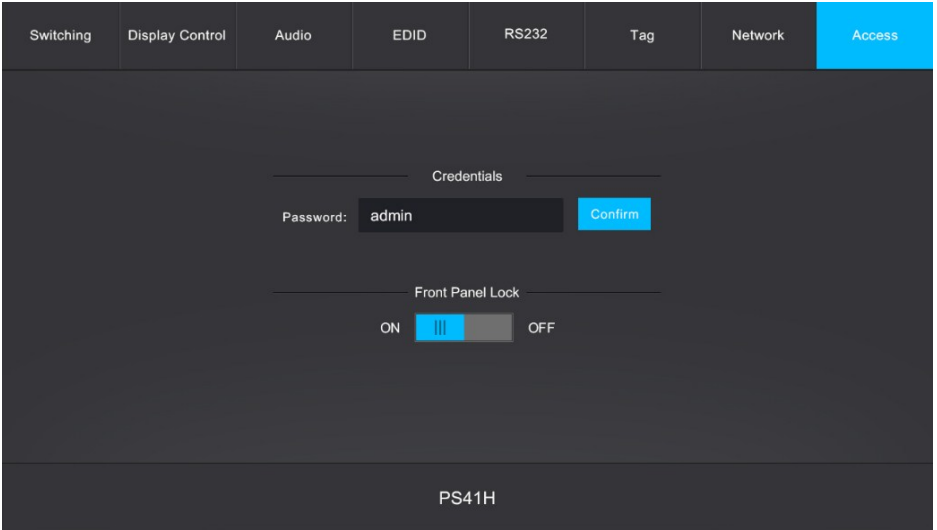


The screenshot shows the 'Access' tab of the Stoltzen PS41H web interface. The interface has a dark grey background with a light blue header bar containing navigation tabs: Switching, Display Control, Audio, EDID, RS232, Tag, Network, and Access (highlighted in light blue). Below the tabs, the 'Credentials' section features a 'Password:' label, a text input field containing 'admin', and a light blue 'Confirm' button. The 'Front Panel Lock' section includes a label, an 'ON' button with a light blue indicator, a grey 'OFF' button, and a light blue indicator bar. At the bottom of the interface, the model number 'PS41H' is displayed.

- Modify the login password.
- Lock or unlock the front panel buttons.

## 7.9 GUI Upgrade

Please visit at <http://192.168.0.178:100> for GUI online upgrade.

Type the username and password (the same as the GUI log-in setting, modified password will be available only after rebooting) to login the configuration interface. After that, click **Administration** in the source menu to get to **Upload Firmware** as shown below:

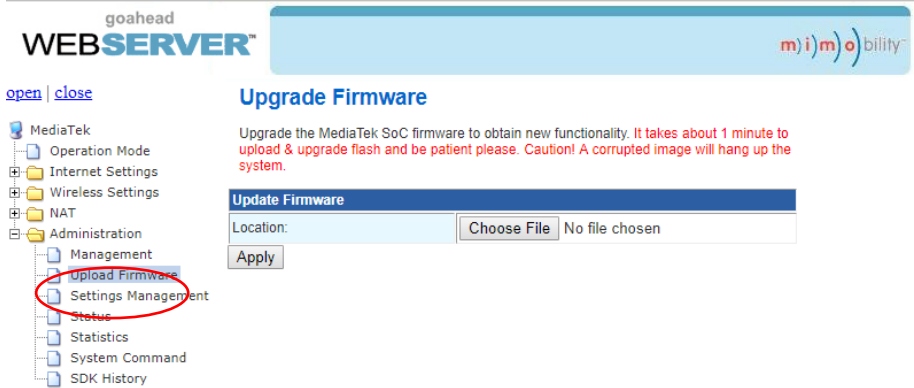

Select the update file and click **Apply** button, and then it will start upgrade process.



## 8. RS232 Control

Connect the RS232 port to control device (e.g. PC) with RS232 cable. The switcher can be controlled by sending the RS232 commands.

### 8.1 RS232 Control Software

- **Installation:** Copy the control software file to the control PC.
- **Uninstallation:** Delete all the control software files in corresponding file path.


#### Basic Setting:

Connect the switcher with all input devices and output devices needed, then to connect it with a PC which is installed with RS232 control software. Double-click the software icon to run this software.

Here take the software **CommWatch.exe** as an example:



The main view is shown as below:

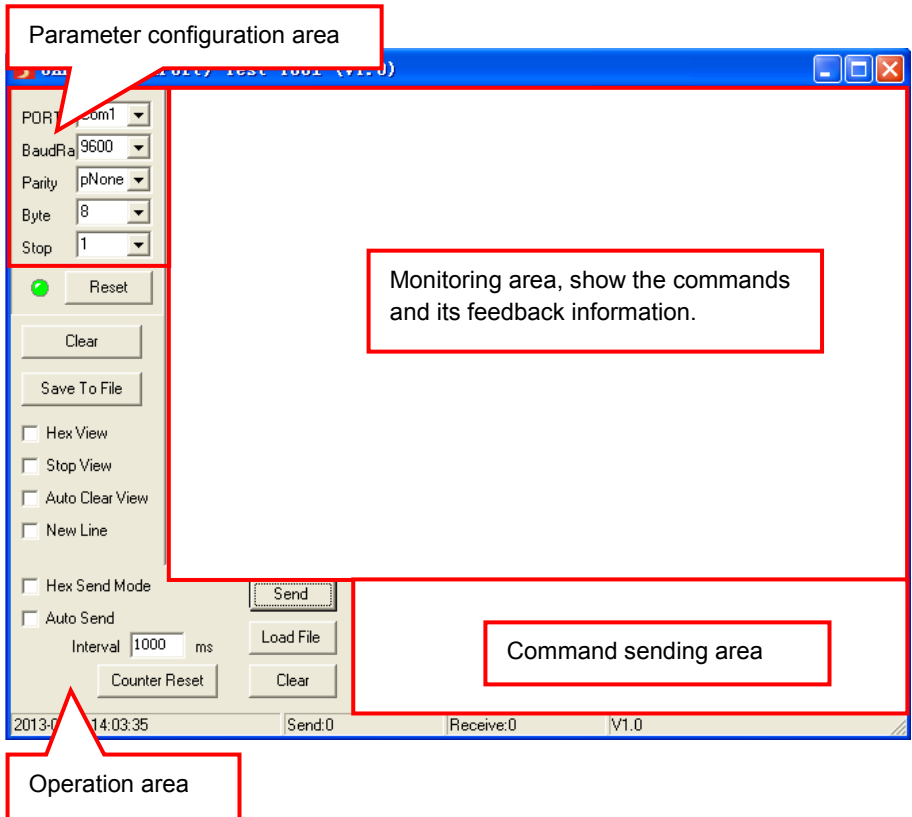

Please set the parameters of COM number, bound rate, data bit, stop bit and the parity bit correctly, and then the command is ready to be sent in command sending area.

## 8.2 RS232 Command

**Communication protocol:** RS232 Communication Protocol

Baud rate: 9600

Data bit: 8

Stop bit: 1

Parity bit: none

### 8.2.1 Device Control

*Note: All commands need to be ended with "<CR><LF>".*

Command	Description	Command Example and Feedback
#SET_POWER X	Power on/off the switcher. X=0, 1. 0 - Power off. 1 - Power on.	#SET_POWER 0
		@POWER 0
#SET_KEYPAD_LOCK X	Lock/unlock the front panel buttons. X=0, 1. 0 - Unlock. 1 - Lock.	#SET_KEYPAD_LOCK 1
		@KEYPAD_LOCK 1
#SET_AUTO_CECRS232 X	Enable/disable the function of CEC Display on/off when a signal source is detected, or there is no signal. X=0, 1. 0 - Disable 1 - Enable	#SET_AUTO_CECRS2 32 1
		@AUTO_CECRS232 1
#SET_STANDBY_DELAY XXX	Set the automatic system standby time to XXX when no source is detected. XXX =0/100~600s. (Default:120s) Set the "XXX" as "0" to disable this function.	#SET_STANDBY_DELAY 120
		#SET_STANDBY_DELAY 0
		@SET_STANDBY_DELAY 120
		@SET_STANDBY_DELAY DISABLE
#GET_STANDBY_DELAY	Get the automatic system standby time.	@GET_STANDBY_DELAY 300
#FACTORY_RESET	System reset.	@FACTORY_RESET
#SET_RS232_BAUD X	Set baud rate of switcher to X. X=1~7. 1 - 2400    2 - 4800    3 - 9600 4 - 19200    5 - 38400    6 - 57600 7 - 115200	#SET_RS232_BAUD 3
		@RS232_BAUD 3
#SET_GUI_IP:XXX.XXX.XX.XXX	Set GUI IP to XXX.XXX.XXX.XXX.	#SET_GUI_IP:192.168.0.178

## Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher

		@GUI_IP:192.168.0.17 8
#GET_GUI_IP	Report GUI IP.	@192.168.0.178
#GET_SYSINFO	Report system status.	... ..

### 8.2.2 Source Switching

**Note:** All commands need to be ended with “<CR><LF>”.

Command	Description	Command Example and Feedback
#SET_AUTO_SWITCH X	Enable/disable auto switching mode. X=0, 1. 0 - Disable 1 - Enable	#SET_AUTO_SWITCH 1
		@AUTO_SWITCH 1
#SET_AV X	Switch to HDMI input X. X=H1, H2, H3, H4. H1 - HDMI1 H3 - HDMI3 H2 - HDMI2 H4 - DP	#SET_AV H1
		@AV H1

### 8.2.3 EDID Management

**Note:** All commands need to be ended with “<CR><LF>”.

Command	Description	Command Example and Feedback
#EDIDR XXXX	Read the preset EDID XXXX. The XXXX represents the 4-pin DIP switch status.	#EDIDR 0001
		@EDID_0001
		...
#EDIDUSE XXXX	Invoke the preset EDID XXXX. Please refer to the <a href="#">5.4 EDID Setting</a> . <b>Note:</b> When invoke the preset EDID, the 4-pin EDID DIP switch on the rear panel must be in the “1111” status.	#EDIDUSE 0001
		@EDIDUSE0001
		@EDID_RS232&GUI_ MODE
		@EDID0001

- **User-define EDID**

There are four EDID values can be customized by sending the below command.

**Note:** When send the below commands to configure EDID, the 4-pin EDID DIP switch on the rear panel must be in the “1111” status.

## Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher

Command	Function & Operation
#EDIDW XXXX	<p>User-define EDID. XXXX=1011, 1100, 1101 or 1110.</p> <p><b>Operation:</b></p> <p><b>Step 1:</b> Prepare the EDID file (.bin).</p> <p><b>Step 2:</b> Set the 4-pin DIP switch to “1111” status.</p> <p><b>Step 3:</b> Send the command “#EDIDW 1101”, and the feedback is “@Please Send The EDID File!”.</p> <p><b>Step 4:</b> Send the EDID file (.bin). If successfully upload, the feedback is: “@Received The File! @Length=256! @EDID1101 Update OK!”</p>

### 8.2.4 Audio Control

*Note: All commands need to be ended with “<CR><LF>”.*

Command	Description	Command Example and Feedback
#SET_IIS X	Turn on/off the stereo analog L/R audio output. X=1, 0. 1 - Turn on. 0 - Turn off.	#SET_IIS 1
		@IIS 1
#SET_SPDIF X	Turn on/off the Toslink digital audio output. X=1, 0. 1 - Turn on. 0 - Turn off.	#SET_SPDIF 1
		@SPDIF 1

### 8.2.5 Display Control

*Note: All commands need to be ended with “<CR><LF>”.*

Command	Description	Command Example and Feedback
#SET_TV_CEC X	Power on/off the display. X=0, 1. 0 - Power off. 1 - Power on.	#SET_TV_CEC 1
		@TV_CEC 1
#SET_TVVOL +	Volume up the display.	@TVVOL +
#SET_TVVOL -	Volume down the display.	@TVVOL -
#SET_TVMUTE	Mute/unmute the display.	#SET_TVMUTE
		@TVMUTE/UNMUTE

### 8.2.6 Third-party Device Control

**Note:** All commands need to be ended with “<CR><LF>”.

Command	Description	Command Example and Feedback																
<b>#SEND_A_(PARAM)</b> <b>:XXXX</b>	<p>Send the ASCII command “XXXX” to control the third device (e.g. Projector).</p> <ul style="list-style-type: none"> <li>(PARAM)=01~07: The baud rate of third-party device.</li> </ul> <table border="1" data-bbox="337 411 723 683"> <thead> <tr> <th>(PARAM)</th> <th>Baud Rate</th> </tr> </thead> <tbody> <tr><td>01</td><td>2400</td></tr> <tr><td>02</td><td>4800</td></tr> <tr><td>03</td><td>9600</td></tr> <tr><td>04</td><td>19200</td></tr> <tr><td>05</td><td>38400</td></tr> <tr><td>06</td><td>57600</td></tr> <tr><td>07</td><td>115200</td></tr> </tbody> </table> <ul style="list-style-type: none"> <li>XXXX: Any ASCII code (up to 48 bytes).</li> </ul>	(PARAM)	Baud Rate	01	2400	02	4800	03	9600	04	19200	05	38400	06	57600	07	115200	<p>#SEND_A_03:123456789</p>           <p>123456789</p>
(PARAM)	Baud Rate																	
01	2400																	
02	4800																	
03	9600																	
04	19200																	
05	38400																	
06	57600																	
07	115200																	
<b>#SEND_H_(PARAM)</b> <b>:XX XX XX</b>	<p>Send the HEX command “XX XX XX” to control the third device (e.g. Projector).</p> <ul style="list-style-type: none"> <li>(PARAM)= 01~07: The baud rate of third-party device.</li> </ul> <table border="1" data-bbox="337 866 723 1137"> <thead> <tr> <th>(PARAM)</th> <th>Baud Rate</th> </tr> </thead> <tbody> <tr><td>01</td><td>2400</td></tr> <tr><td>02</td><td>4800</td></tr> <tr><td>03</td><td>9600</td></tr> <tr><td>04</td><td>19200</td></tr> <tr><td>05</td><td>38400</td></tr> <tr><td>06</td><td>57600</td></tr> <tr><td>07</td><td>115200</td></tr> </tbody> </table> <ul style="list-style-type: none"> <li>XX XX XX: Any HEX code (0-9, A-F; up to 20 bytes. It must have a blank between 2 different XX).</li> </ul>	(PARAM)	Baud Rate	01	2400	02	4800	03	9600	04	19200	05	38400	06	57600	07	115200	<p>#SEND_H_03:30 31 32 33 34</p>
(PARAM)	Baud Rate																	
01	2400																	
02	4800																	
03	9600																	
04	19200																	
05	38400																	
06	57600																	
07	115200																	

## Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher

Command	Description	Command Example and Feedback								
<b>#SEND_ON_A_(PARAM1)_(PARAM2):XX XX</b>	<p>Set the ASCII command “XXXX” to be sent automatically to the third-party device when the switcher is powered on or the <b>DISPLAY ON</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device.                             <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 20px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01.                             <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XXXX: Any ASCII code (up to 48 bytes)</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_ON_A_03_01:123456789</p> <hr/> <p>@CMD_ON Save Success 123456789</p>
		01: 2400	02:4800							
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										
<b>#SEND_ON_H_(PARAM1)_(PARAM2):XX XX XX</b>	<p>Set the HEX command “XX XX XX” to be sent automatically to the third-party device when the switcher is powered on or the <b>DISPLAY ON</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device.                             <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 20px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01.                             <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XX XX XX: Any HEX code (0-9, A-F; up to 20 bytes. It must have a blank between 2 different XX).</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_ON_H_03_01:30 31 32 33 34</p> <hr/> <p>@CMD_ON Save Success 30 31 32 33 34</p>
		01: 2400	02:4800							
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										

## Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher

Command	Description	Command Example and Feedback								
<b>#SEND_OF_A_(PARAM1)_(PARAM2):XX XX</b>	<p>Set the ASCII command "XXXX" to be sent automatically to the third-party device when the switcher is powered off or the <b>DISPLAY OFF</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device.               <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 20px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01.               <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XXXX: Any ASCII code (up to 48 bytes).</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_OF_A_05_01:123456789</p> <hr/> <p>@CMD_OFF Save Success 123456789</p>
01: 2400	02:4800									
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										
<b>#SEND_OF_H_(PARAM1)_(PARAM2):XX XX XX</b>	<p>Set the HEX command "XX XX XX" to be sent automatically to the third-party device when the switcher is powered off or the <b>DISPLAY OFF</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device.               <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 20px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01.               <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XX XX XX: Any HEX code (0-9, A-F; up to 20 bytes. It must have a blank between 2 different XX).</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_OF_H_05_01:30 31 32 33 34</p> <hr/> <p>@CMD_OFF Save Success 30 31 32 33 34</p>
01: 2400	02:4800									
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										



## Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher

Command	Description	Command Example and Feedback								
<b>#SEND_VOLD_A_(PARAM1)_(PARAM2): XXXX</b>	<p>Set the ASCII command "XXXX" to be sent automatically to the third-party device when the <b>VOLUME DOWN</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device. <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 40px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01. <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XXXX: Any ASCII code ((up to 48 bytes)</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_VOLD_A_03_01:123456789</p> <hr/> <p>@CMD_VOLDOWN Save Success 123456789</p>
01: 2400	02:4800									
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										
<b>#SEND_VOLD_H_(PARAM1)_(PARAM2): XX XX XX</b>	<p>Set the HEX command "XX XX XX" to be sent automatically to the third-party device when the <b>VOLUME DOWN</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device. <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 40px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01. <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XX XX XX: Any HEX code (0-9, A-F; up to 20 bytes. It must have a blank between 2 different XX).</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_VOLD_H_03_01:30 31 32 33 34</p> <hr/> <p>@CMD_VOLDOWN Save Success 30 31 32 33 34</p>
01: 2400	02:4800									
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										

## Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher

Command	Description	Command Example and Feedback								
<b>#SEND_VOLU_A_(PARAM1)_(PARAM2): XXXX</b>	<p>Set the ASCII command "XXXX" to be sent automatically to the third-party device when the <b>VOLUME UP</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device. <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 40px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01. <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XXXX: Any ASCII code ((up to 48 bytes)</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_VOLU_A_03_01:123456789</p> <hr/> <p>@CMD_VOLUP Save Success 123456789</p>
01: 2400	02:4800									
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										
<b>#SEND_VOLU_H_(PARAM1)_(PARAM2): XX XX XX</b>	<p>Set the HEX command "XX XX XX" to be sent automatically to the third-party device when the <b>VOLUME UP</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device. <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 40px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01. <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XX XX XX: Any HEX code (0-9, A-F; up to 20 bytes. It must have a blank between 2 different XX).</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_VOLU_H_03_01:30 31 32 33 34</p> <hr/> <p>@CMD_VOLUP Save Success 31 32 33 34</p>
01: 2400	02:4800									
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										

## Stoltzen PS41H HDMI 2.0 4x1 Presentation Switcher


Command	Description	Command Example and Feedback								
<b>#SEND_VOLM_A_(PARAM1)_(PARAM2): XXXX</b>	<p>Set the ASCII command "XXXX" to be sent automatically to the third-party device when the <b>VOLUME MUTE</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device. <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 40px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01. <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XXXX: Any ASCII code ((up to 48 bytes))</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_VOLM_A_03_01:123456789</p> <hr/> <p>@CMD_VOLMUTE Save Success 123456789</p>
01: 2400	02:4800									
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										
<b>#SEND_VOLM_H_(PARAM1)_(PARAM2): XX XX XX</b>	<p>Set the HEX command "XX XX XX" to be sent automatically to the third-party device when the <b>VOLUME MUTE</b> button is pressed.</p> <ul style="list-style-type: none"> <li>● (PARAM1)=01~07: The baud rate of third-party device. <table style="margin-left: 20px; border: none;"> <tr> <td style="padding-right: 40px;">01: 2400</td> <td>02:4800</td> </tr> <tr> <td>03: 9600</td> <td>04: 19200</td> </tr> <tr> <td>05: 38400</td> <td>06: 57600</td> </tr> <tr> <td>07: 115200</td> <td></td> </tr> </table> </li> <li>● (PARAM2)=00,01. <ul style="list-style-type: none"> <li>00: Clear the command.</li> <li>01: Add new command to be sent.</li> </ul> </li> <li>● XX XX XX: Any HEX code (0-9, A-F; up to 20 bytes. It must have a blank between 2 different XX).</li> </ul>	01: 2400	02:4800	03: 9600	04: 19200	05: 38400	06: 57600	07: 115200		<p>#SEND_VOLM_H_03_01:30 31 32 33 34</p> <hr/> <p>@CMD_VOLMUTE Save Success 30 31 32 33 34</p>
01: 2400	02:4800									
03: 9600	04: 19200									
05: 38400	06: 57600									
07: 115200										

## **9. Firmware Upgrade**

Please follow the steps as below to upgrade firmware by the **FW** port on the front panel:

- 1) Prepare the latest upgrade file (.bin) and rename it as “USERAPP.bin” on PC.
- 2) Power off the switcher, and connect the **FW** port of switcher to the PC with USB cable.
- 3) Power on the switcher, and then the PC will automatically detect a U-disk named of “BOOTDISK”.
- 4) Double-click the U-disk, a file named of “READY.TXT” would be showed.
- 5) Directly copy the latest upgrade file (.bin) to the “BOOTDISK” U-disk.
- 6) Reopen the U-disk to check the filename “READY.TXT” whether automatically becomes “SUCCESS.TXT”, if yes, the firmware was updated successfully, otherwise, the firmware updating is fail, the name of upgrade file (.bin) should be confirm again, and then follow the above steps to update again.
- 7) Remove the USB cable after firmware upgrade.
- 8) After firmware upgrade, the switcher should be restored to factory default by sending command.

# 10. Panel Drawing

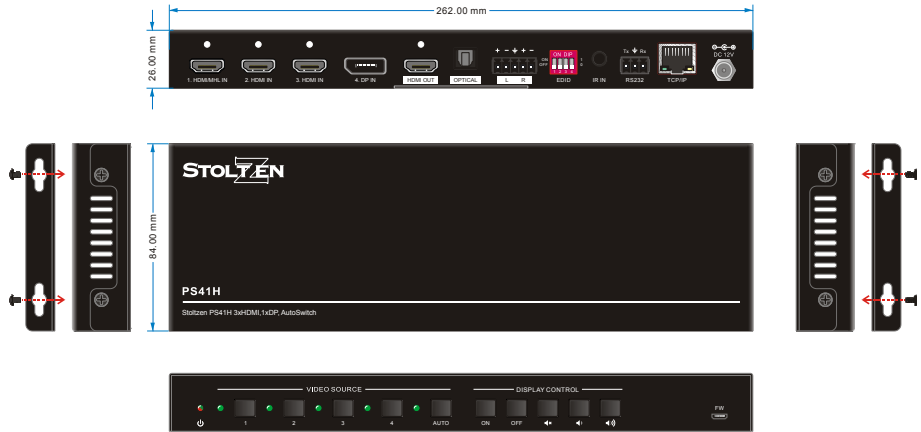

## 11. Troubleshooting & Maintenance

Problems	Potential Causes	Solutions
Output image with snowflake	Bad quality of the connecting cable	Try another high quality cable.
	Fail or loose connection	Make sure the connection is good
No output image when switching	No signal at the input / output end	Check with oscilloscope or multimeter if there is any signal at the input/ output end.
	Fail or loose connection	Make sure the connection is good
	The switcher is broken	Send it to authorized dealer for repairing.
<b>POWER</b> indicator doesn't work or no respond to any operation	Fail connection of power cord.	Make sure the power cord connection is good.
EDID management does not work normally	The HDMI cable is broken at the output end.	Change for another HDMI cable which is in good working condition.
Static becomes stronger when connecting the video connectors	Bad grounding	Check the grounding and make sure it is connected well.
Cannot control the device by control device (e.g. a PC) through RS232 port	Wrong RS232 communication parameters	Type in correct RS232 communication parameters.
	Broken RS232 port	Send it to authorized dealer for checking.
Cannot control the device by front panel buttons while can control it through RS232 port	The front panel buttons are locked	Unlock the front panel buttons.

**Note:** If the problem still remaining after following the above troubleshooting steps, please contact your local dealer or distributor for further assistance.

## 12. Customer Service

The return of a product to our Customer Service implies the full agreement of the terms and conditions hereinafter. These terms and conditions may be changed without prior notice.

### 1) Warranty

The limited warranty period of the product is fixed three years.

### 2) Scope

These terms and conditions of Customer Service apply to the customer service provided for the products or any other items sold by authorized distributor only.

### 3) Warranty Exclusion

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
  - ✓ Normal wear and tear.
  - ✓ Use of supplies or parts not meeting our specifications.
  - ✓ No certificate or invoice as the proof of warranty.
  - ✓ The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
  - ✓ Damage caused by force majeure.
  - ✓ Servicing not authorized by distributor.
  - ✓ Any other causes which does not relate to a product defect.
- Shipping fees, installation or labor charges for installation or setup of the product.

### 4) Documentation

Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defect has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

**Remarks:** Please contact your local distributor for further assistance or solutions.